

10FT CASITA CANOPY TENTS™ ALUMINUM KIT 3


TENTS
PRODUCT CODE: CAS-10-KIT3



Black Trim



White Trim

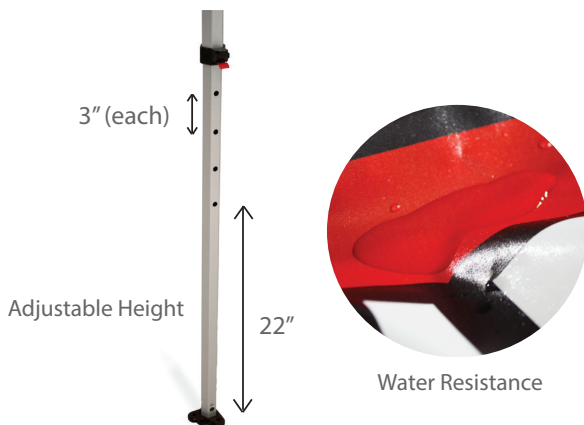

PRODUCT DESCRIPTION

The 10ft Aluminum Casita Kit 3 is a versatile, open-style canopy solution designed for brands that want strong structure and graphic visibility without fully enclosing the space. Built around a lightweight yet durable 10ft aluminum Casita tent frame, this kit delivers excellent stability while remaining easy to transport and quick to assemble. The aluminum construction offers long-term durability and corrosion resistance, making it ideal for repeated use in both indoor and outdoor environments, while the clean, modern frame profile supports a polished and professional presentation.

This kit includes three single-sided Casita half walls, each paired with its own dedicated half wall rail, creating a defined perimeter that maintains open sightlines and easy access from multiple sides. The half walls provide added branding opportunities and subtle space definition, making the configuration well suited for sampling stations, check-in areas, or interactive activations where approachability is key. A standard tent travel bag is also included to keep all components organized and protected during transport and storage. Together, these elements make the 10ft Aluminum Casita Kit 3 a flexible and efficient solution for creating branded environments that feel open, inviting, and professionally executed.

DISPLAY DIMENSIONS	118.75"W x 135"H x 118.75"D
MIN/MAX HEIGHT	99" H to 135"H

GRAPHIC MATERIAL

Dye Sub Tent Fabric (UPF 50+ Rated Material)

TENT TOP GRAPHIC FINISHING

Hemmed around panels w/white or black trim on seams. Velcro sewn to insides of each valance corner and reinforcement sewn inside of peak.

BACK WALL GRAPHIC FINISHING

Hemmed around perimeter with white or black trim to match tent top. Hook and loop straps are added along the top and sides to attach wall to tent frame.

HALF WALL GRAPHIC FINISHING

Hemmed around perimeter with white or black trim to match tent top. A pole pocket is added to the top of the half wall to slide the rail through with hook and loop straps added to each bottom corner to secure to the tent legs.

DISPLAY CONSTRUCTION

Aluminium tent frame w/40mm dia hex legs & plastic components. Aluminum half wall rails with plastic clamps.

TENT SHIPPING WEIGHTS & DIMENSIONS

Shipping Weight	63 lbs (tent frame+ top + bag)
Shipping Dimensions	63"L x 11"W x 11"H

BACK/HALF WALL SHIPPING WEIGHTS & DIMENSIONS

Shipping Weight	24 lbs (3 half walls, 3 rails)
Shipping Dimensions	60"L x 8"W x 8"H

WIND SPEED RATING	20 - 28 mph
-------------------	-------------

PARTS LIST TENT



(qty 1)
Tent Frame



(qty 1)
Travel Bag

PARTS LIST RAILS




(qty 6)
Rail Clamp



(qty 6)
Rail Clamp Bolt



(qty 3)
Center Rail
Connector

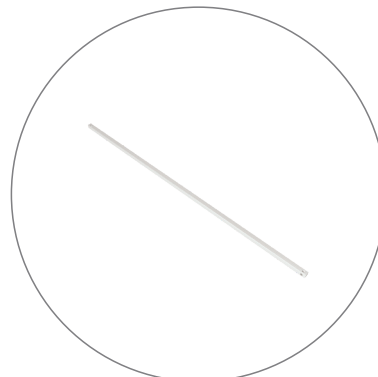

(qty 6)
Outer Rails

AVAILABLE ACCESSORIES



10ft Wheeled Bag
CAS-BAGWHL



Falcon Flag Connector 0°
FAL-FMOD (flag mount)
FAL-FLGCNCT (back plate)



La Caja Hardcase
LACAJA



Ropes & Stakes
CAS-RS



Sand Bag Cover
CAS-SBAG



Plastic Water Base
CAS-SQR-BASE

SET UP INSTRUCTIONS

Step 1

Take your frame and slightly expand it open to expose the corner bars.



Step 2

Take your canopy graphic and place it on top of the frame.




Step 3

Adhere each corner of the canopy to each corner of the frame. Inside each corner of the canopy, there is a strip of loop Velcro sewn to it and each corner of the frame has a strip of hook Velcro.



Step 4

With the canopy securely in position, expand the frame until the corner latches lock into place.

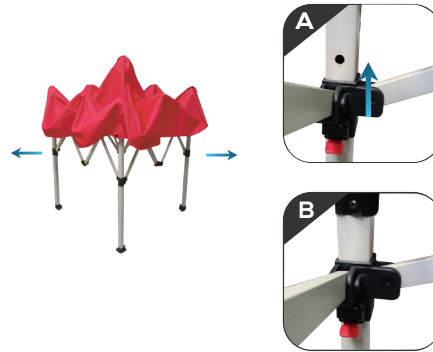


Step 5

Increase the height by extending the lower legs.



Step 6

Pull each leg down until the latch locks into place.

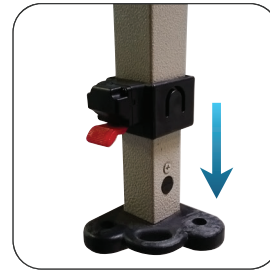

Step 7

Locate the spindle under the canopy, in the middle of the frame. Pull the lever out and rotate to extend the upper peak pole. The dome cap will push out the canopy creating tension to flush out any loose areas.



Step 8

The install is complete.



ATTACHING HALF WALLS



Outer Rail

Center Rail Connector

Outer Rail

Tent Rail Assembly

1. Connect left and right outer rails with rail center connector. (Push spring buttons in before sliding rail center connector over outer rails to connect)

Half Wall and Rail Installation

1. Set up tent
2. Assemble tent rail
3. Slide tent rail through top pole pocket of half wall
4. Attach rail clamps to tent legs
5. Connect ends of tent rails to rail clamps on tent legs
6. Insert screw knobs to secure tent rail and half wall
7. Adjust rail height to desired level before fully tightening screw knobs
8. Attach Velcro straps to tent legs to complete half wall installation