

# 10FT CASITA CANOPY TENTS™ ALUMINUM KIT 4


TENTS  
PRODUCT CODE: CAS-10-KIT4



Black Trim



White Trim

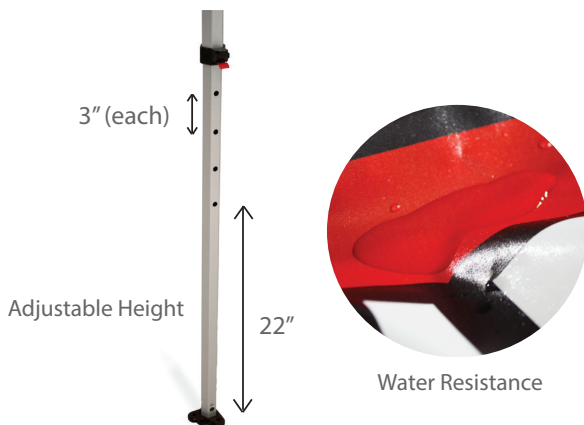

## PRODUCT DESCRIPTION

The 10ft Aluminum Casita Kit 4 is a thoughtfully configured canopy solution designed to balance enclosure, visibility, and functionality for events and branded activations. Built around a lightweight yet durable 10ft aluminum Casita tent frame with matching tent top, this kit provides reliable overhead coverage while maintaining a clean, modern appearance. The aluminum construction ensures long-term durability and corrosion resistance, making it well suited for both indoor and outdoor use, while the streamlined design allows for efficient setup and breakdown without sacrificing a polished, professional look. Included in the kit is one single-sided Casita back wall with an integrated window, along with two single-sided Casita half walls, each supported by its own half wall rail. This configuration creates a semi-enclosed environment that offers privacy and branding opportunities while allowing light, airflow, and visual connection through the window opening. The half walls help define the space and guide traffic without fully closing off the tent, making this layout ideal for service counters, check-in stations, or interactive displays. A standard tent travel bag is also included to keep all components organized and protected during transport and storage, making the 10ft Aluminum Casita Kit 4 a versatile and professional solution for a wide range of event applications.

DISPLAY DIMENSIONS	118.75"W x 135"H x 118.75"D
MIN/MAX HEIGHT	99" H to 135"H

## GRAPHIC MATERIAL

Dye Sub Tent Fabric (UPF 50+ Rated Material)

## TENT TOP GRAPHIC FINISHING

Hemmed around panels w/white or black trim on seams. Velcro sewn to insides of each valance corner and reinforcement sewn inside of peak.

## BACK WALL GRAPHIC FINISHING

Hemmed around perimeter with white or black trim to match tent top. Hook and loop straps are added along the top and sides to attach wall to tent frame.

## HALF WALL GRAPHIC FINISHING

Hemmed around perimeter with white or black trim to match tent top. A pole pocket is added to the top of the half wall to slide the rail through with hook and loop straps added to each bottom corner to secure to the tent legs.

## DISPLAY CONSTRUCTION

Aluminium tent frame w/40mm dia hex legs & plastic components. Aluminum half wall rails with plastic clamps.

## TENT SHIPPING WEIGHTS & DIMENSIONS

Shipping Weight	63 lbs (tent frame+ top + bag)
Shipping Dimensions	63"L x 11"W x 11"H

## BACK/HALF WALL SHIPPING WEIGHTS & DIMENSIONS

Shipping Weight	22 lbs (1 back wall, 2 half walls, 2 rails)
Shipping Dimensions	60"L x 8"W x 8"H

WIND SPEED RATING	20 - 28 mph
-------------------	-------------

## PARTS LIST TENT



(qty 1)  
Tent Frame



(qty 1)  
Travel Bag

## PARTS LIST RAILS




(qty 4)  
Rail Clamp



(qty 4)  
Rail Clamp Bolt



 (qty 2)  
Center Rail  
Connector

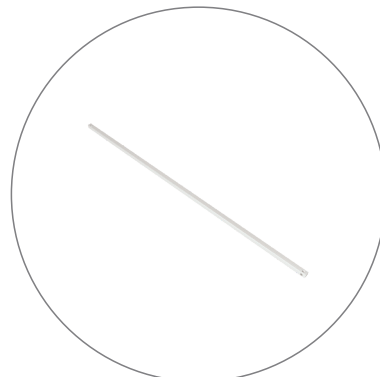

(qty 4)  
Outer Rails

## AVAILABLE ACCESSORIES



10ft Wheeled Bag  
CAS-BAGWHL



Falcon Flag Connector 0°  
FAL-FMOD (flag mount)  
FAL-FLGCNCT (back plate)



La Caja Hardcase  
LACAJA



Ropes & Stakes  
CAS-RS



Sand Bag Cover  
CAS-SBAG



Plastic Water Base  
CAS-SQR-BASE

## SET UP INSTRUCTIONS

### Step 1

Take your frame and slightly expand it open to expose the corner bars.



### Step 2

Take your canopy graphic and place it on top of the frame.



 
### Step 3

Adhere each corner of the canopy to each corner of the frame. Inside each corner of the canopy, there is a strip of loop Velcro sewn to it and each corner of the frame has a strip of hook Velcro.



### Step 4

With the canopy securely in position, expand the frame until the corner latches lock into place.

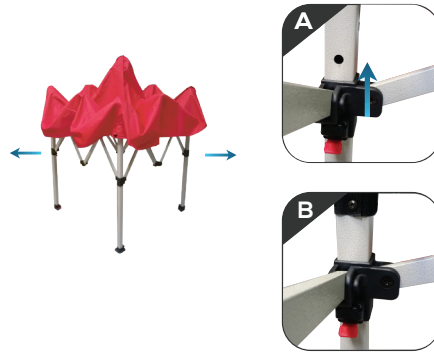


### Step 5

Increase the height by extending the lower legs.



### Step 6

 Pull each leg down until the latch locks into place.

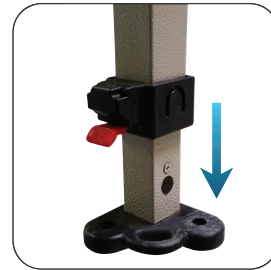

### Step 7

Locate the spindle under the canopy, in the middle of the frame. Pull the lever out and rotate to extend the upper peak pole. The dome cap will push out the canopy creating tension to flush out any loose areas.




### Step 8

The install is complete.



## ATTACHING BACK WALL

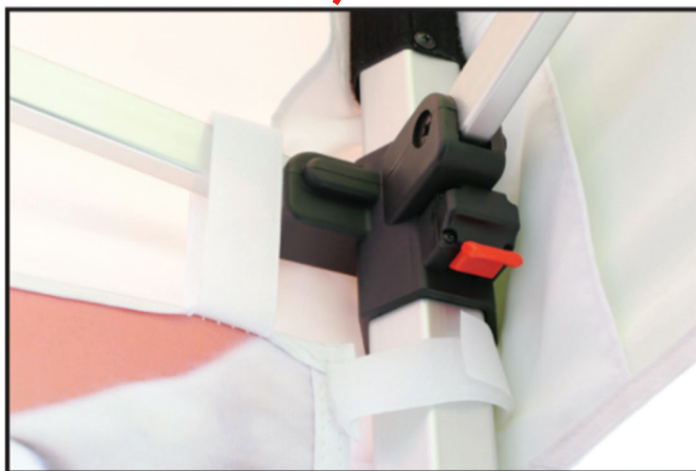

Back Wall Top & Side Straps

1. Set up tent
2. Attach top straps of back wall to the horizontal "X Braces" of tent frame (See photo to left)
3. Once all top straps are connected to the frame, attach the straps on the left and right sides of the wall to the tent legs.
4. Make sure to remove back wall prior to collapsing frame for storage/transport.

## ATTACHING HALF WALLS



Outer Rail

Center Rail Connector

Outer Rail

### Tent Rail Assembly

1. Connect left and right outer rails with rail center connector. (Push spring buttons in before sliding rail center connector over outer rails to connect)

### Half Wall and Rail Installation

1. Set up tent
2. Assemble tent rail
3. Slide tent rail through top pole pocket of half wall
4. Attach rail clamps to tent legs
5. Connect ends of tent rails to rail clamps on tent legs
6. Insert screw knobs to secure tent rail and half wall
7. Adjust rail height to desired level before fully tightening screw knobs
8. Attach Velcro straps to tent legs to complete half wall installation