



CANOPY TENTS

ONE CHOICE® 10 FT. TENT BACKWALL W/WINDOW
PRODUCT CODE: OC-CAS-10BW-WIN



Set Up Instructions



Back Wall Top & Side Straps

1. Set up tent
2. Attach top straps of back wall to the horizontal "X Braces" of tent frame (See photo to left)
3. Once all top straps are connected to the frame, attach the straps on the left and right sides of the wall to the tent legs.
4. Make sure to remove back wall prior to collapsing frame for storage/transport.