CANOPY TENTS

INSTRUCTIONS

Step 1
Take your frame and slightly expand it to expose the corner bars.

Step 2
Take your canopy graphic and place it on top of the frame.

Step 3
Adhere each corner of the canopy to each corner of the frame. Inside each corner of the canopy, there is a strip of Hook and Loop sewn to it.

Step 4
With the canopy securely in position, expand the frame until the corner latches lock into place.

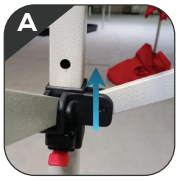

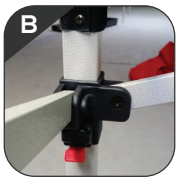

Step 5
Increase the height by extending the lower legs.

Step 6
Pull each leg down until the latch locks into place.

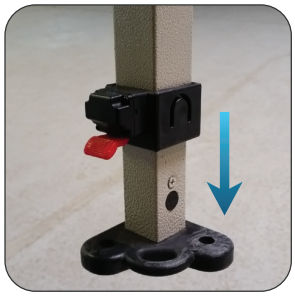

Step 7
Locate the spindle under the canopy, in the middle of the frame. Pull the lever out and rotate to extend the upper peak pole.

Step 8
The dome cap will push out the canopy, creating tension to flush out any loose areas.

Step 9
The install is complete.