


PARTS GUIDE


Please remove all parts from the package and review them.
Contact your service representative if there are any missing parts.

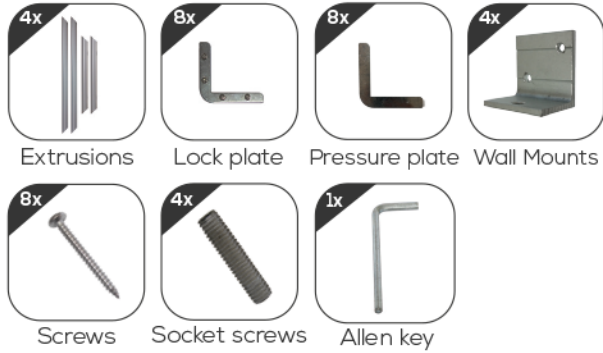

GRAPHIC MOUNTING GUIDE

Step 1

- Locate the silicone edge beading on the back of the graphic, which is sewn to the back perimeter.
- In each corner, insert the silicone edge beading into the groove.

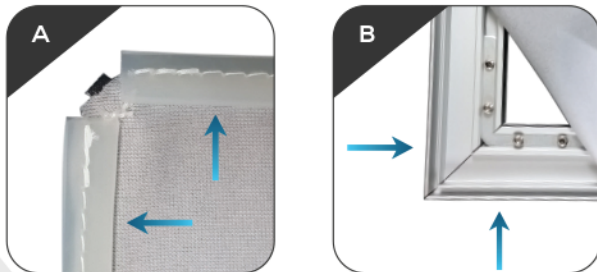

Step 2

- On each side, insert the remainder of the beading.
- The graphic should appear flush and completely tucked into the frame. Repeat the process on the back side if using a 2nd graphic.



ADDITIONAL RESORT EXTRUSION STYLES



ASPEN
T-Leg



ASPEN
Fabric Frame Backwall



VAILS



ASPEN
Onyx



BIG SKY
Towers & Counters




ALPINE BOOTHS

ASPEN

FABRIC FRAME SYSTEMS

SET UP INSTRUCTIONS

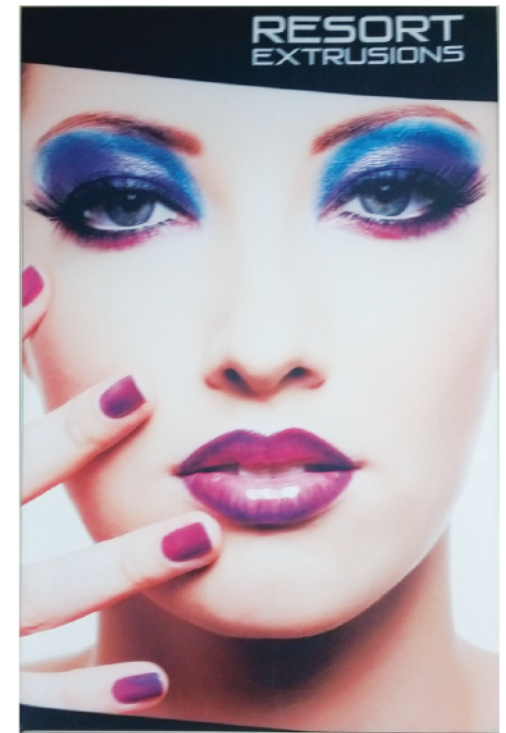

SINGLE-SIDED
WALL MOUNTED FRAME

INSTALLATION STEPS


Step 1

Gather all 4 of the extrusions and lay them out on a flat surface. The extrusions will be linked together using the lock and pressure plates.




Step 4

Repeat step 3 on the back side of the extrusion. Then repeat the same step on the opposite end.

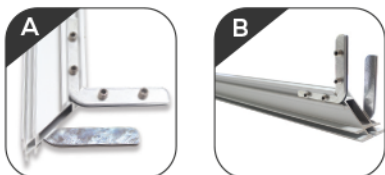


Step 7

Repeat steps 2-5 for the last remaining extrusion. Tighten all socket screws with the 3mm allen key.

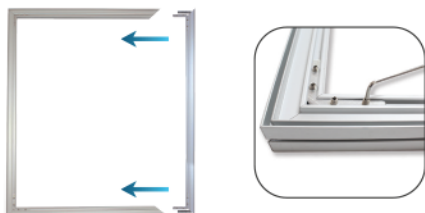


Step 10

Using a level and a pencil, draw a horizontal line that is approximately the width of the inside of the frame. This line will serve as a guide to mount the top wall mounts. A measuring tape or ruler may also help when marking your wall mount guides.

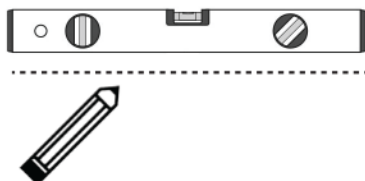

Step 2

Align the lock plate and pressure plate together. Make sure that the socket screws are recessed enough so the two pieces sit flush together.

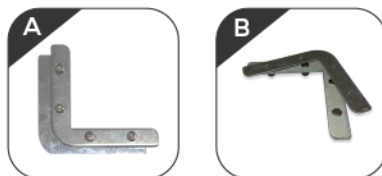

Step 5

Slide in both adjacent extrusions. These extrusions should match as a pair in length.




Step 8

The frame is complete and is ready to be mounted to a wall.




Step 11

Based on your guide line, screw in the top wall mounts. The top wall mounts should be in an inverted position.

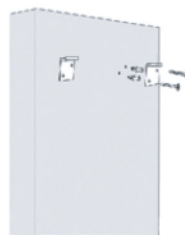

Step 3

Insert the aligned pieces completely into the slot. Insertion begins at either end of the extrusion. DO NOT TIGHTEN the socket screws.

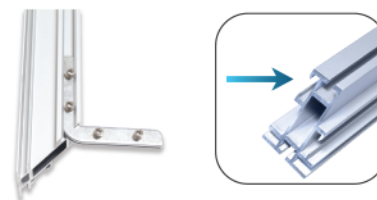


Step 6

Make sure the corners of the extrusions are flush.




Step 9

There are 4 wall mount brackets. You will secure (2) at the top and (2) at the bottom using the supplied concrete screws.

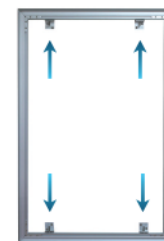

Step 12

Hang the frame on the top wall mounts and then proceed to screw in the bottom wall mounts, right side up. Apply pressure using the wall mount socket screws. You are now ready to apply your graphic.

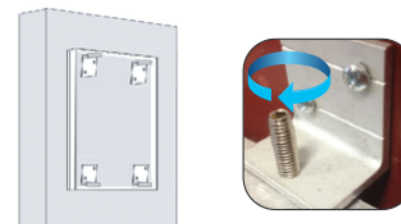

(2nd FOLD HERE)

(1st FOLD HERE)