

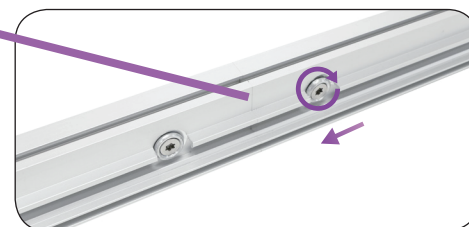


FRAME ASSEMBLY INSTRUCTIONS

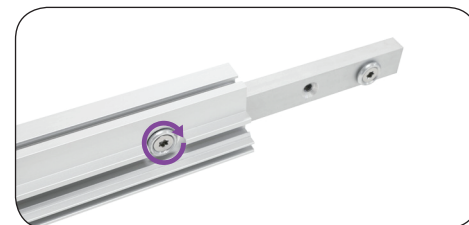



Split Connectors

Used to join sides of frame longer than 9ft

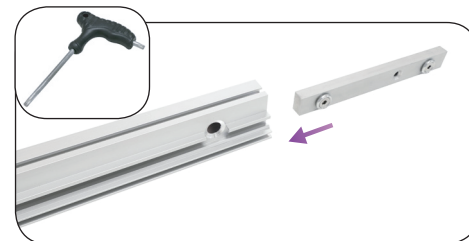

Corner Connectors

Used to join sides to top/bottom

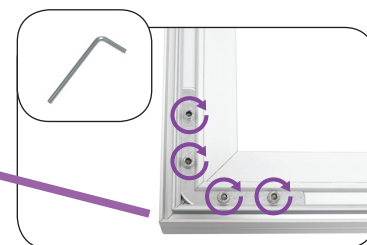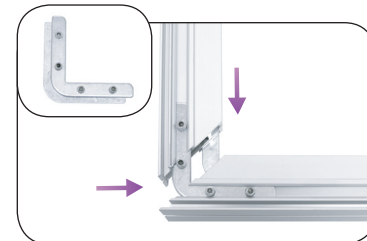

ASPEN FABRIC BLACK FRAME WITH WALL MOUNT

REESORT EXTRUSIONS


PRODUCT CODE: AFBLKWM




On Frame

OnGraphic

WALL MOUNT INSTRUCTIONS

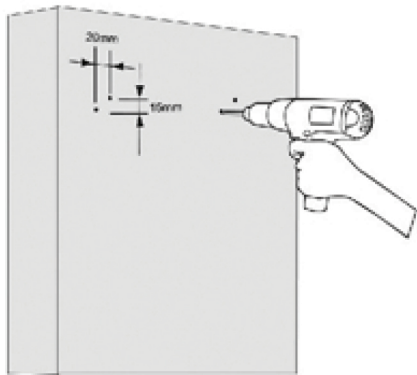


Position the wall mounts on the wall close enough for the threaded screw to be able to apply pressure to the frame. Space them evenly across the top and bottom edges of the inside edges of the frame. Mark the hole locations with a pen or marker and drill holes large enough to fit the plastic screw anchors.

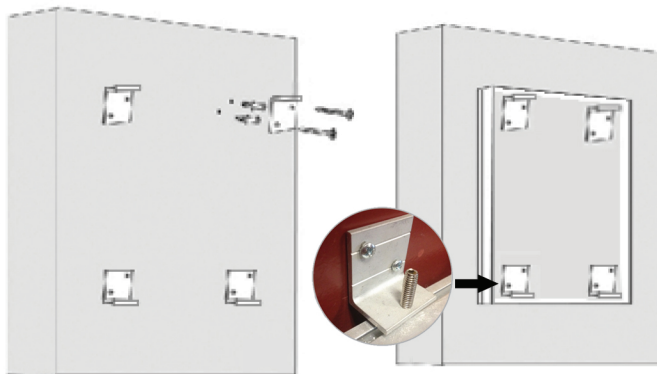

Insert wall anchors into holes, place wall mount over wall anchors making sure holes on mounts line up with anchors. Insert screws into holes and tighten them with a screwdriver to secure.

Tighten allen key screws on wall mounts to apply pressure to the frame. Repeat for all wall mounts to secure frame to the wall.

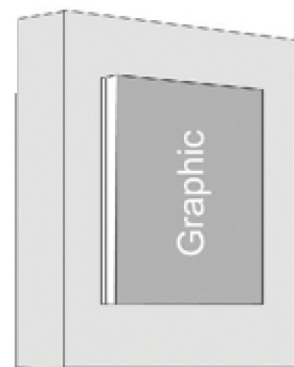

Install your graphic by tucking the silicone beading into each corner of the frame and then working your way around the edges of the frame to complete graphic installation.