ASPEN SLIM DEALERSHIP PACKAGE KIT 1


ASPEN SLIM

PRODUCT CODE: ASPEN-SLIM-DP-KIT1

SINGLE SIDED

INDOOR USE


SET UP INSTRUCTIONS

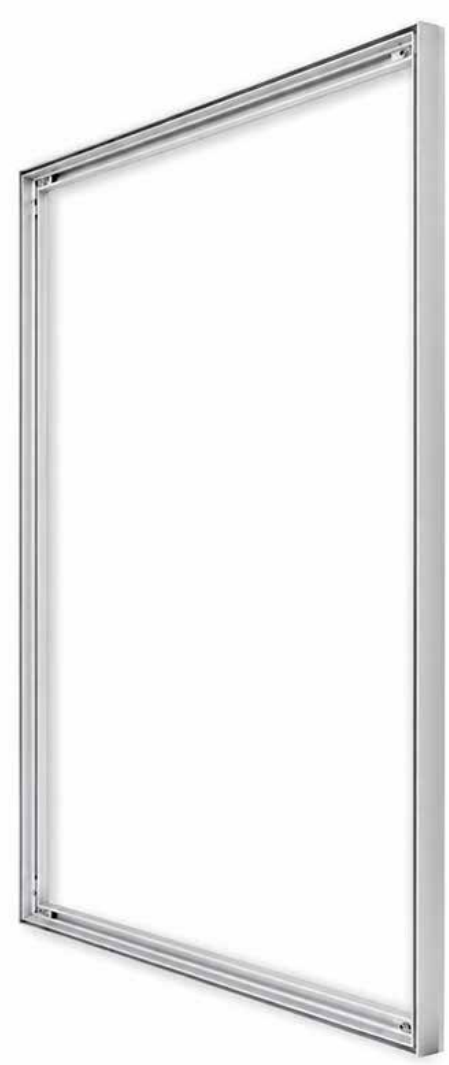



Corner Connector Installation

1. Align front lock plate with back pressure plate back to back
2. Slide the aligned pieces into the channel of the extrusion
3. Slide the adjacent extrusion onto the corner connector
4. Tighten screws with allen key
5. Repeat process for all sides

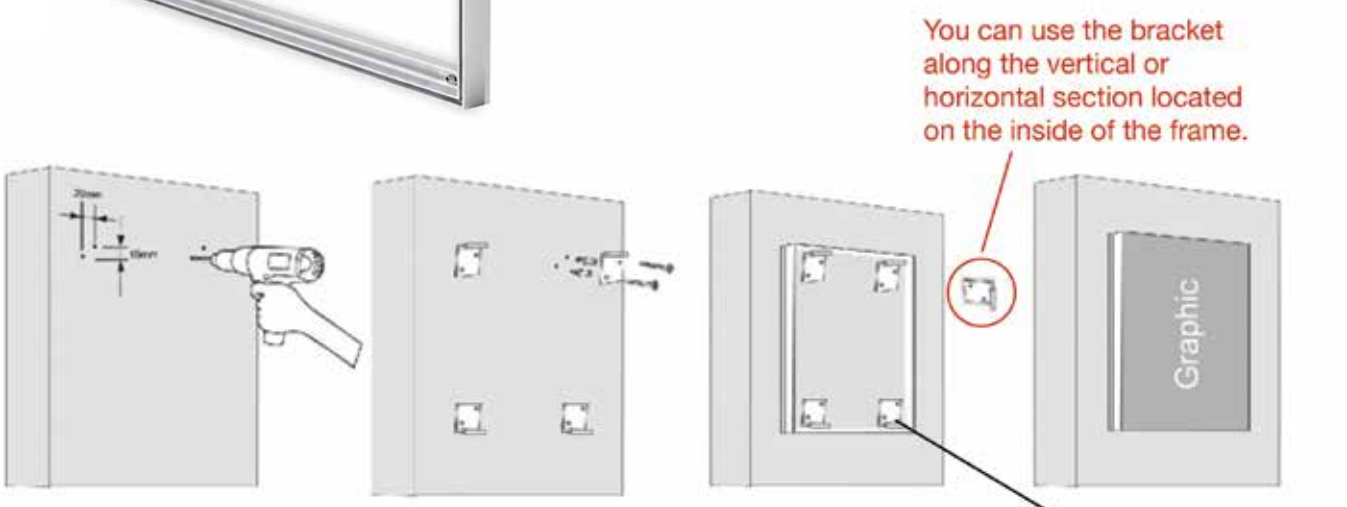



Wall Mount Installation

1. Screw 4 wall mounts to wall close enough for the threaded screw to be able to apply pressure to the frame
2. Use an allen key and tighten each screw apply pressure along each side of the frame
3. Install graphic