# ASPEN SLIM DEALERSHIP PACKAGE KIT 2


ASPEN SLIM

**PRODUCT CODE:** ASPEN-SLIM-DP-KIT2

SINGLE SIDED

INDOOR USE


## SET UP INSTRUCTIONS

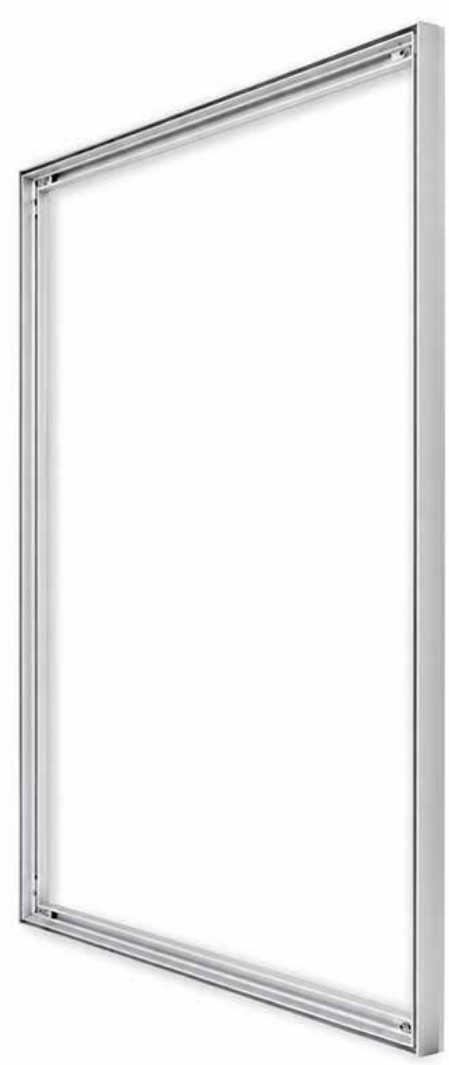



### Corner Connector Installation

1. Align front lock plate with back pressure plate back to back
2. Slide the aligned pieces into the channel of the extrusion
3. Slide the adjacent extrusion onto the corner connector
4. Tighten screws with allen key
5. Repeat process for all sides

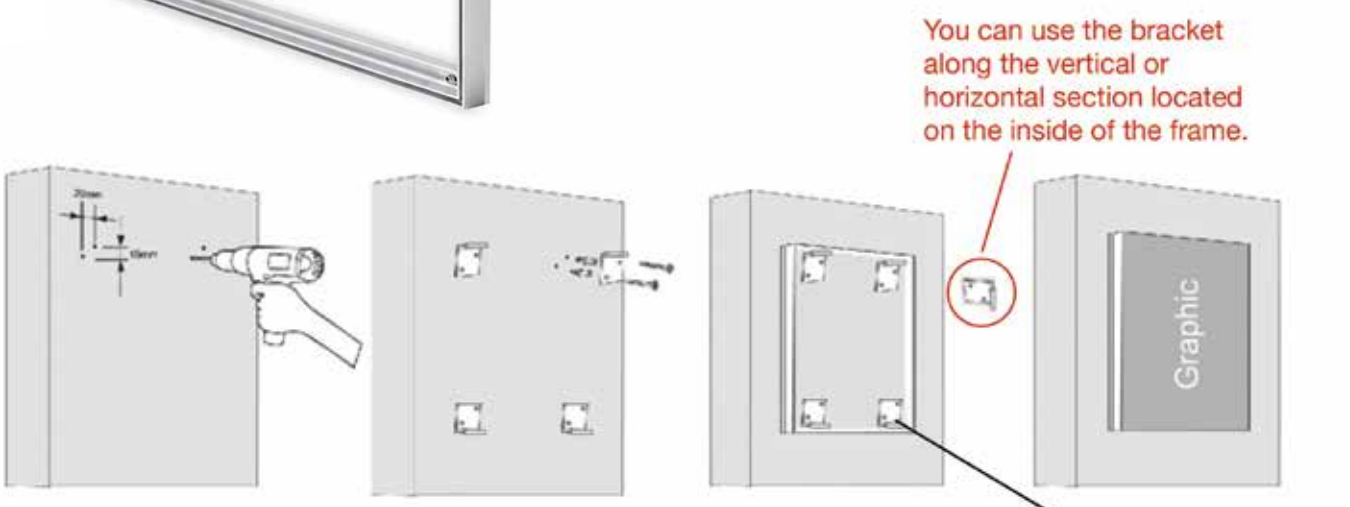


### Wall Mount Installation

1. Screw 4 wall mounts to wall close enough for the threaded screw to be able to apply pressure to the frame
2. Use an allen key and tighten each screw apply pressure along each side of the frame
3. Install graphic