



Frame Assembly

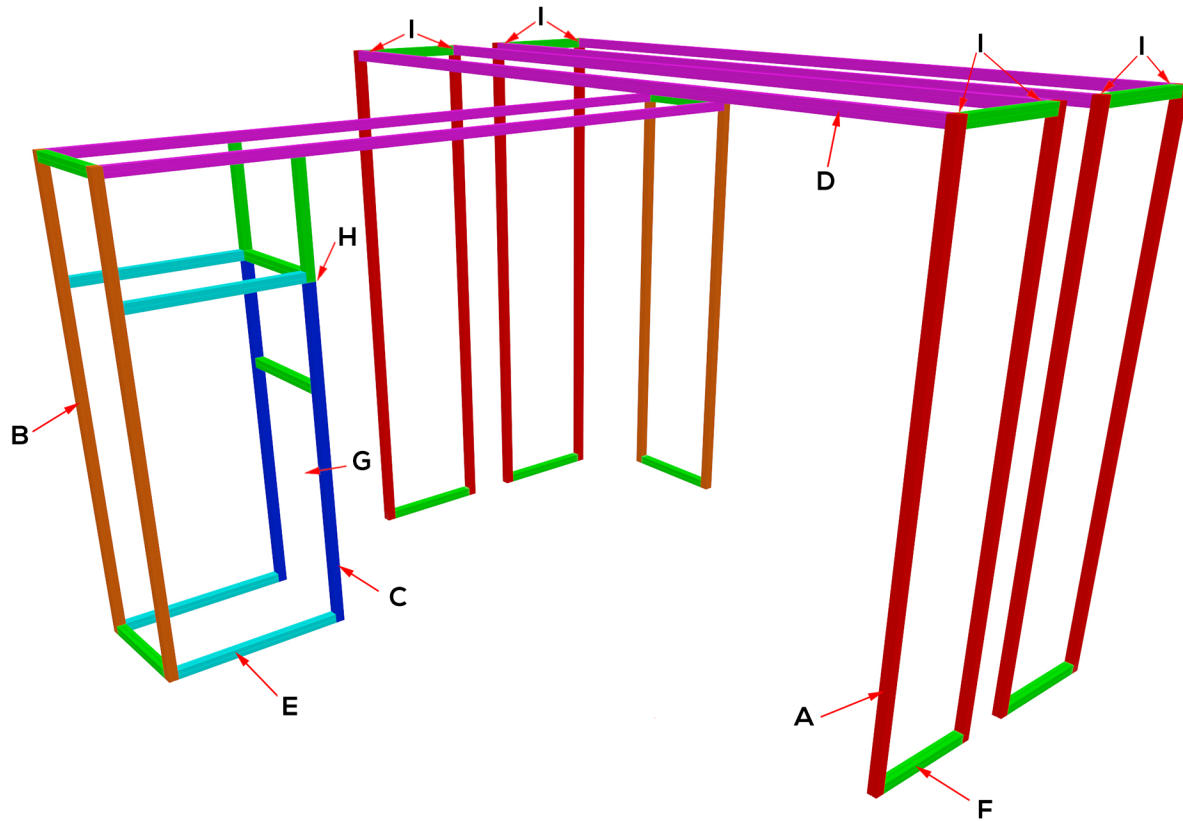


REF	SKU	QTY	Length In
A	CABO-80	8	172.2"
B	CABO-80	4	152.8"
C	CABO-80	2	149.6"
D	CABO-80	6	230.7"
E	CABO-80	4	55.3"
F	CABO-80	14	37.375"
G	CABO-DOOR	1	n/a
H	CABO-80-ADPT	1	n/a
I	CABO-CS	8	n/a

Lock/Connector Instructions

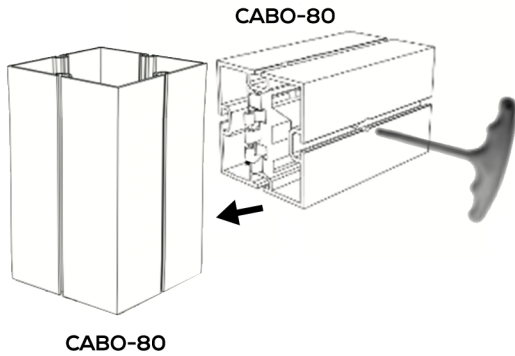


CABO-80 Profile Connection

1. Line up lock with system groove on vertical profile
2. Insert teeth of lock into groove
3. Use torx tool to tighten lock (turn clockwise to tighten)

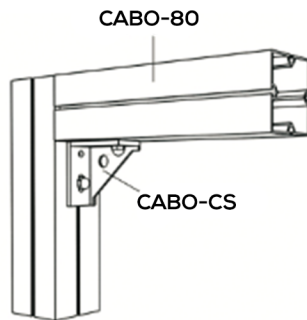

CABO-CS Installation


1. Insert hammerhead screws through holes in CABO-CS (make sure "hook" side of screw is on the flat side of the bracket)
2. Place CABO-CS into inside 90° corner of profiles and insert hammerhead screw into system groove on profile
3. Tighten nut on hammerhead screw to secure CABO-CS into place

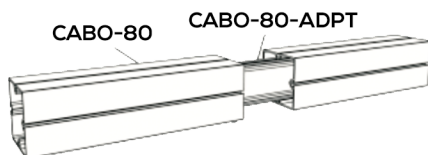


CABO-80-ADPT Connection

1. Insert CABO-80-ADPT into one CABO-80 profile
2. Slide opposing CABO-80 profile onto CABO-80-ADPT
3. Tighten screws on CABO-80-ADPT to secure profiles in place

SEG Attachments

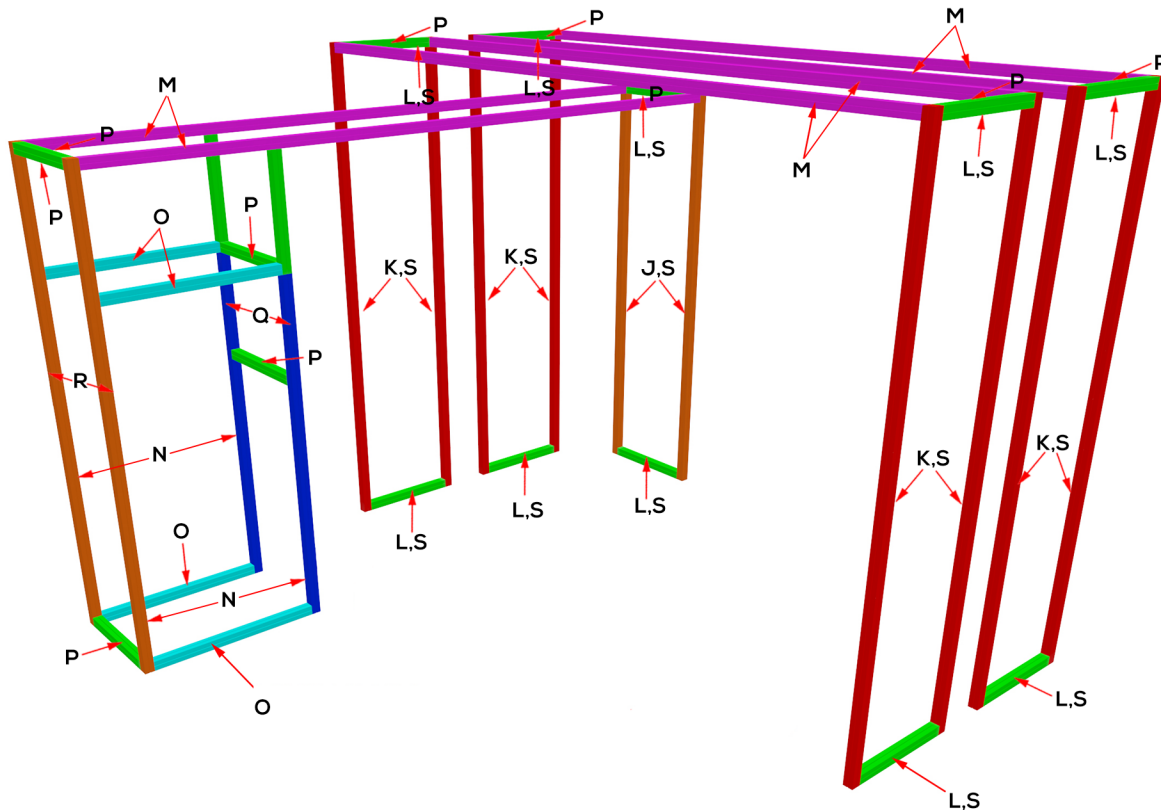


REF	SKU	QTY	Length In
J	CABO-80-SEG	2	146.4
K	CABO-80-SEG	8	165.9
L	CABO-80-SEG	10	37.275
M	CABO-SEG-PLASTIC	6	230.6
N	CABO-SEG-PLASTIC	4	110.6
O	CABO-SEG-PLASTIC	4	55.2
P	CABO-SEG-PLASTIC	10	37.275
Q	CABO-SEG-PLASTIC	2	31.8
R	CABO-SEG-PLASTIC	2	146.4
S	CABO-HHS	140	

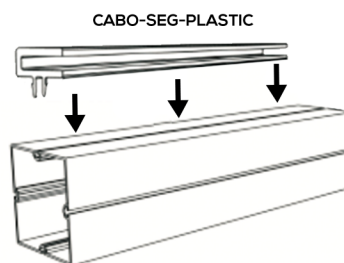

CABO-SEG-PLASTIC Installation

1. Line up clip of CABO-SEG-PLASTIC with system groove of profile
2. Press CABO-SEG-PLASTIC down to lock into place.

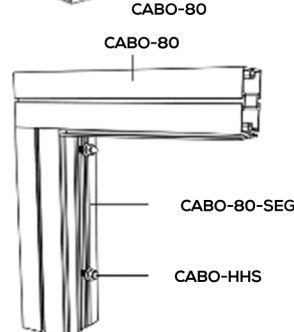

CABO-80-SEG Installation

1. Unscrew CABO-HHS and feed through holes on CABO-80-SEG
2. Line up CABO-HHS with system groove on profile CABO-80-SEG will attach to
3. Tighten CABO-HHS clockwise to secure

DOOR INSTALLATION



Product Description

Standard Aluminum Door Be hinged on the right open out against you Includes two piece of plywood panel. 2000*950mm

Door Dimensions

78.125" H x 40.82 W x 1.57 D

Shipping Weight

32 Lbs

Door Construction

Aluminum Frame and hinges

