



SETUP INSTRUCTIONS

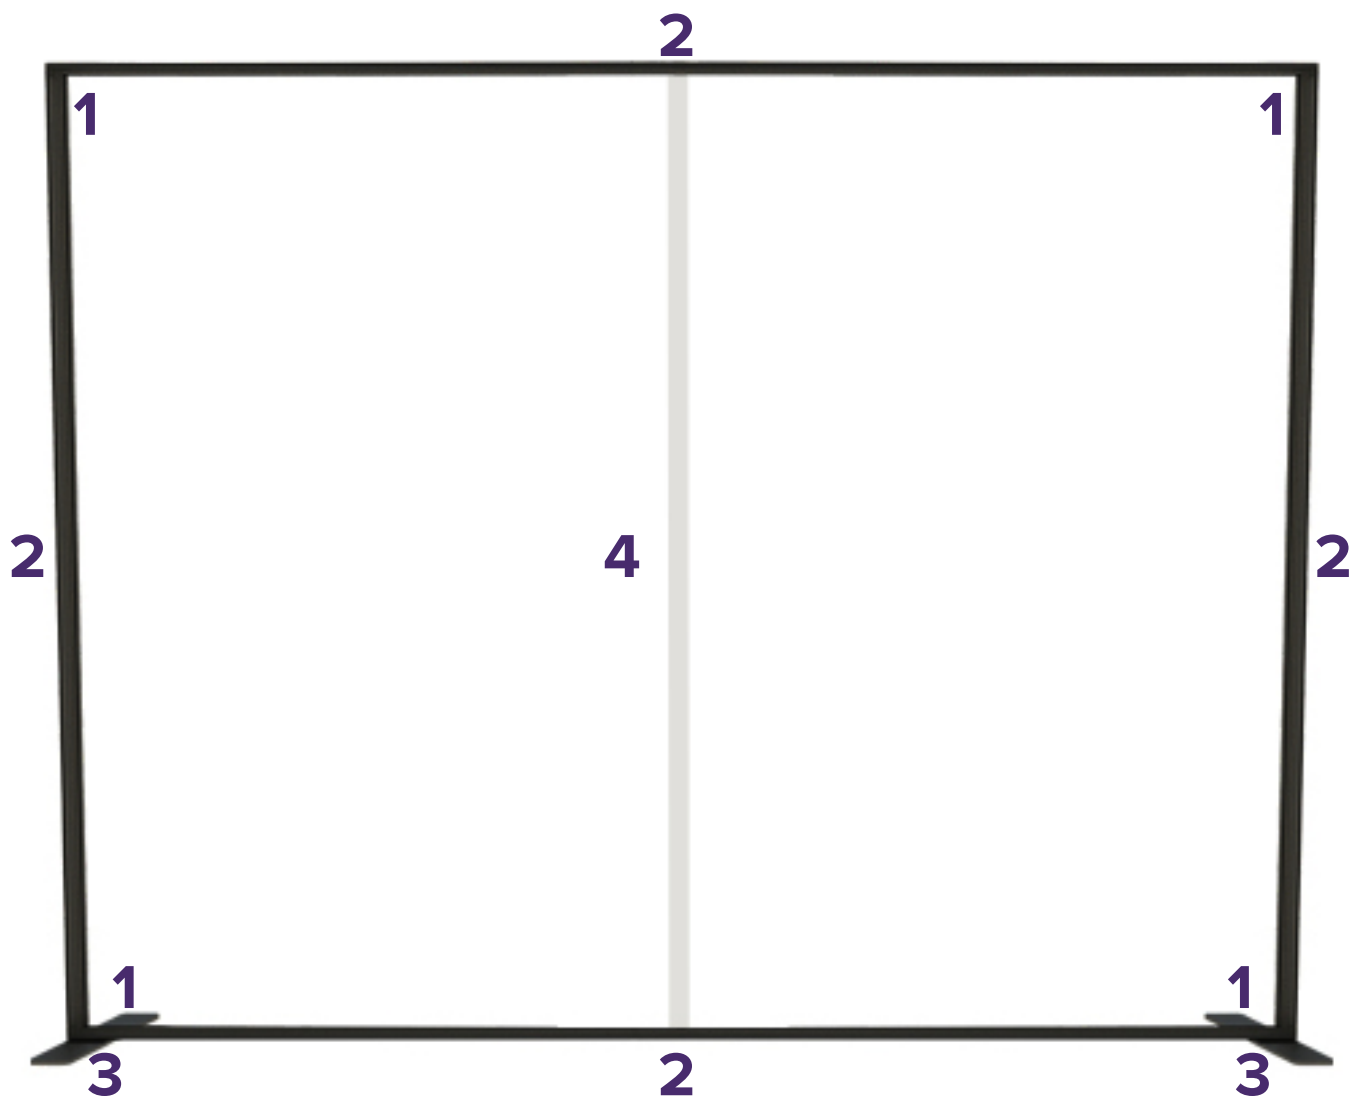

1 TRIANGLE CORNER LOCK

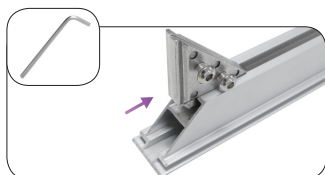


2 SPLIT CONNECTOR*





*For frames 9ft and wider

3 VAIL BOTTOM FOOT

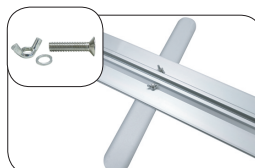

4 VERTICAL STRUT*

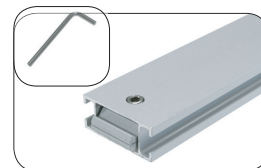


*For frames 9ft and wider

GRAPHIC INSTALLATION



a. Locate the silicone edge beading, which is sewn onto the back of the perimeter of the graphic.

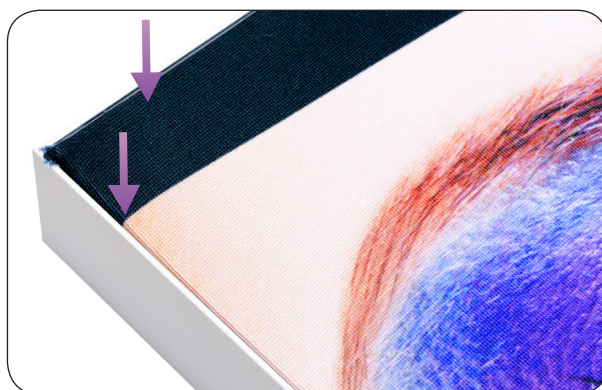


b. Insert the silicone edge beading into the silicone channel, starting at the corner.



c. At counter clockwise, continue to insert the silicone edge beading at each corner into the silicone channel.



d. Then push down from the middle.

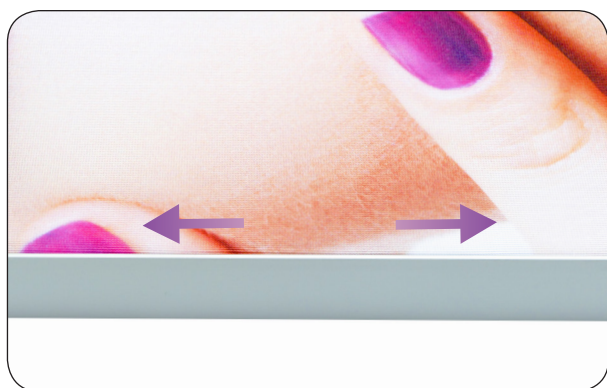

e. Work your way toward the finished corners.



f. Repeat by installing the rest of the graphic counter clockwise. Complete graphic installation.